



RemoteTargetVisu: Reading the Client Name


- Create a "Standard project" and select *CODESYS Control Win V3* as the device.
- Define the target system by means of the *Network scan*.

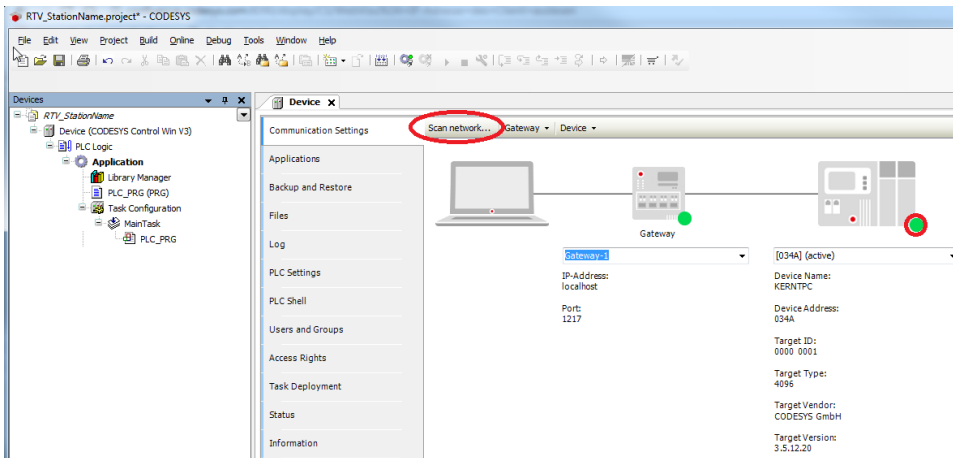


- Open the *Library Manager* and add the following library: *VisuUtils*

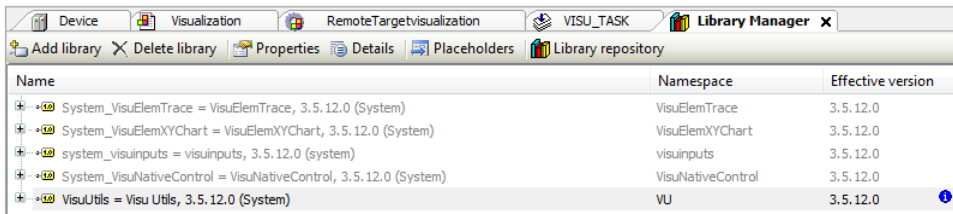

- Insert a visualization in the device tree. Then the *Visualization Manager* is inserted with the visu types *TargetVisu* and *WebVisu*. Delete both of these and add a *RemoteTargetvisualization*. Then assign the *Visualization* to it as the start page. In addition, a *VISU_TASK* is also created automatically.

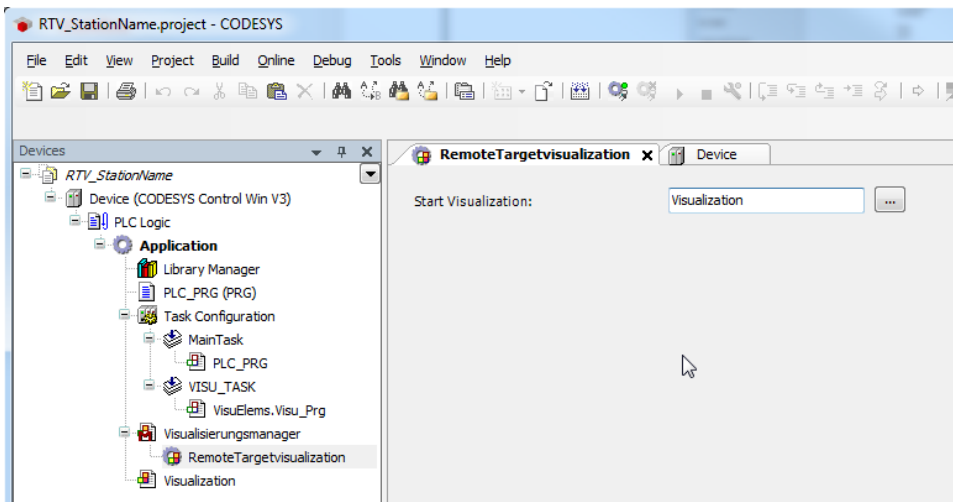


- Create a new FB named *FB_Iteration* and implement the *VU.IVisualizationClientIteration* interface.

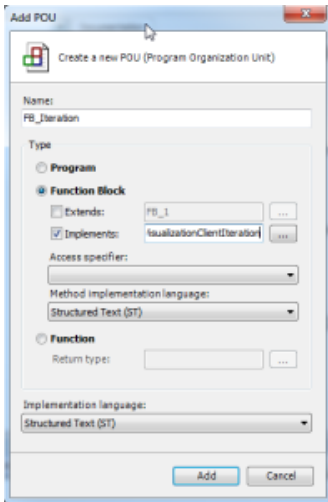

The following methods are created automatically with the FB:

EndIteration
HandleClient
StartIteration

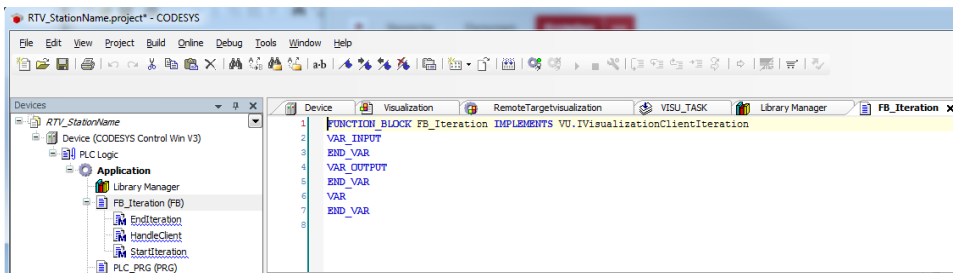

- Adapt the *FB_Iteration* function block as follows:

Declaration

```
FUNCTION_BLOCK FB_Iteration IMPLEMENTS VU.IVisualizationClientIteration
VAR_INPUT
END_VAR
VAR_OUTPUT
END_VAR
VAR
    sRtvName1 : STRING;
END_VAR
```

- Adapt the *HandleClient* method as follows:

Declaration

```
(* This method will be called for each client that is currently within the list
of active visualization clients.

.. note:: Please remark that this method will be called from VISU_TASK*)
METHOD HandleClient
VAR_INPUT
    (* The object representing the according client. Will not be 0.*)
    itfClient : VU.IVisualizationClient;
END_VAR
```

Implemen
tation

```

IF itfClient.ClientType = VU VisuClientType.RemoteTargetVisualization THEN
    sRtvName1 := itfClient.GetClientName();
END_IF

```

- Adapt the POU `PLC_PRG` as follows:

Declaration

```

VAR
    fbIteration          : FB_Iteration;
    fbIterateClients     : VU.FbIterateClients;
END_VAR

```


Implementation

```

fbIterateClients(xExecute:=TRUE, itfClientFilter:=VU.Globals.AllClients, itfIterationCallback:=fbIteration);
IF fbIterateClients.xDone THEN
    fbIterateClients(xExecute:=FALSE, itfClientFilter:=VU.Globals.AllClients,
    itfIterationCallback:=fbIteration);
END_IF

```

- Load the project to the controller and start it.

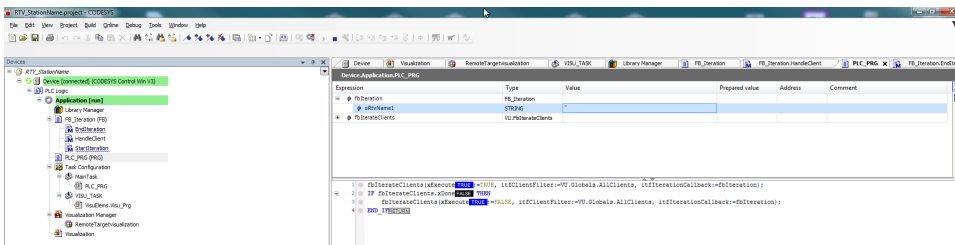

- Open the `targetvisuremote.cfg` file and add the following entries to the `CmpVisuHandlerRemote` section:

```

[CmpVisuHandlerRemote]
VisuClient.Name=CodesysRemoteClient1

```

- After the remote target visu is started, the specified name is shown in the project:

