


Visu: Disabling an Entry for WebVisualizations Only

- Create a "Standard project" and select *CODESYS Control Win V3* as the device.
- Define the target system by means of the *Network scan*.

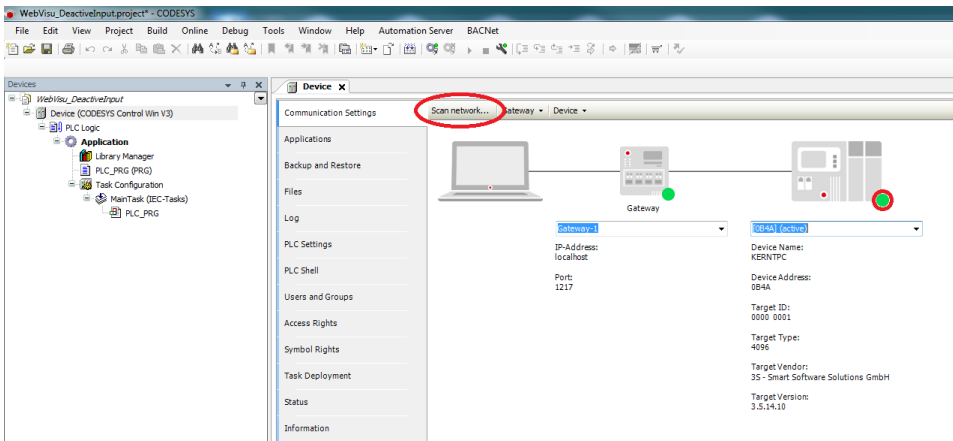

- Edit the *PLC_PRG* POU as follows:


Declaration

```
VAR
    udiCnt : UDINT;
END_VAR
```

Implementation

```
// Nothing to implement
```

- Create a new POU *IsWebVisu* (type: function).
The return value is type *BOOL* and the implementation language is *ST*.

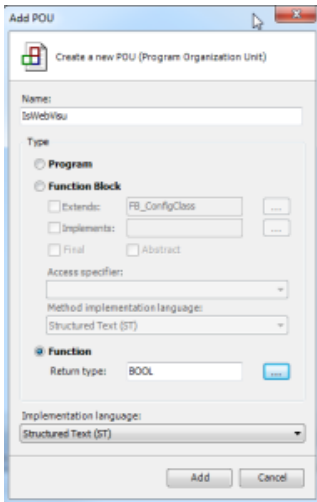

- Edit the *IsWebVisu* POU as follows:

Declaration


```
VAR
  pClientData : POINTER TO VisuElems VisuStructClientData;
END_VAR
```

Implementation


```
IsWebVisu := TRUE;
pClientData := VisuElems.CurrentVisuClient;

IF pClientData <> 0 THEN
  IsWebVisu := pClientData^.GlobalData.ClientType = VisuElems.VisuElemBase.Visu_ClientType.
  WebVisualization;
END_IF
```

- Insert a visualization in the device tree.
Then the *Visualization Manager* is inserted automatically with the visu types *TargetVisu* and *WebVisu* .
In addition, a *VISU_TASK* is also created automatically.

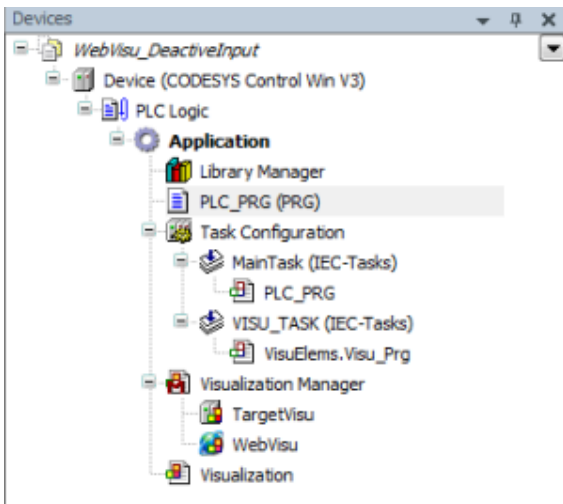


- In the *Visualization*, set a *Rectangle* element and configure the element as follows:

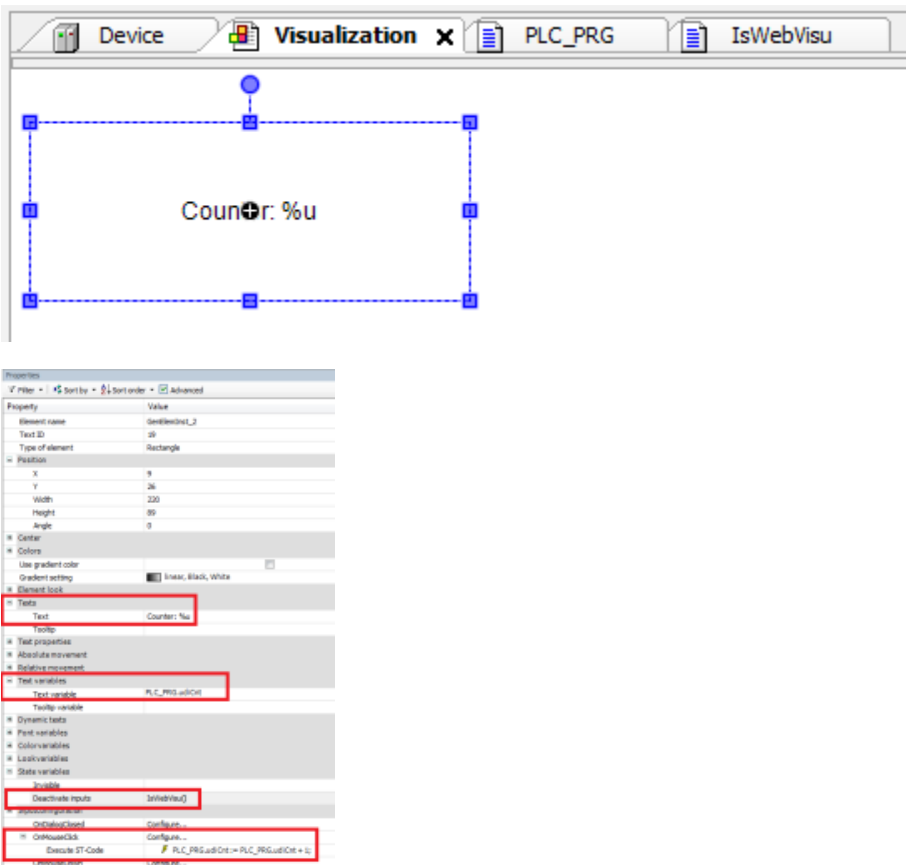

- Download the project to the controller and start it.
The counter is incremented only when you click the rectangle in the *TargetVisu*.
The rectangle is disabled (gray) in the *WebVisu*.

Counter: 4

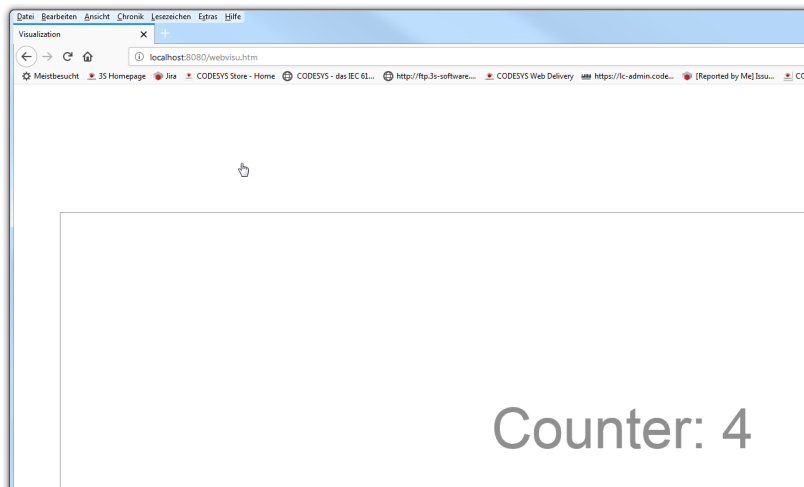

- dsgsdg