

# The CODESYS Integrated Development Environment (IDE)

This general section contains FAQs about the [CODESYS Development System / CODESYS Engineering / Integrated Development Environment / CODESYS Graphical User Interface](#).

- [Report problems and error messages to CODESYS](#)
- [How to open an Example Project](#)
- [How to create a 'Core Dump' in Codesys projects](#)
- [How to analyzing errors in Codesys projects with 'Core Dump'](#)
- [Coloring the background of the search function, color for the marking of the search results](#)
- [Expired certificates message for encrypted communication](#)
- [Switch off the precompilation](#)
- [What are the meanings of the memory occupation data in the message window?](#)
- [CODESYS communication: Limited data size between PLC and CODESYS IDE](#)
- [Online or Offline created 'boot application' have different sizes](#)

Find our current CODESYS Development System Version on our [CODESYS STORE](#) side!